



Da-cappo DA07 DUAL FOLDING EAR MICRO MICROPHONE


DA07 is a fully adjustable headset microphone able to suit a wide range of head sizes ensuring comfort and firm fitting for most users.

- 2.5mm diam European designed capsule which has been proven to provide clear full-frequency audio
- enclosure design that protects the capsule so as to be water resistant
- ear-cushions can be adjusted to suit smaller and larger ears
- ear-cushions fold down to allow flat-packing of headset in zipper case
- adjustable boom length to suit preference
- sweat ring on boom for extra moisture protection
- available in two sensitivities and four colours
- package includes lavalier style mic clip to secure cable to collar behind neck

DA07 comes in a zipper leatherette case containing the mic, cable, cable clip, and wind sock. At time of purchase, customer selects one adaptor from the wide range available.

Capsule	Back electret condenser
Polar Pattern	Omni-directional
Frequency Response	20Hz-20KHz
Sensitivity	-35±3dB (DA07A), -45dB±3dB (DA07B)
Equivalent noise (A-weighted)	25dB SPL
Output Impedence	2K Ω ±30%
SPL max	140dB
Operating Voltage	0.9 VDC (optimal), 5 VDC (maximum)
Cable	1.2mm diameter
Mic Capsule Dimension	2.5mm diameter



Available in Beige, Black, Coffee & White

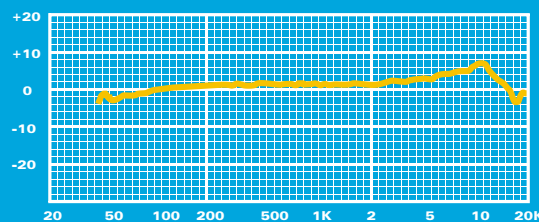

ACCESSORY RANGE



Da-cappo has a wide range of accessories and replacement items. For the full range go to www.da-cappo.com



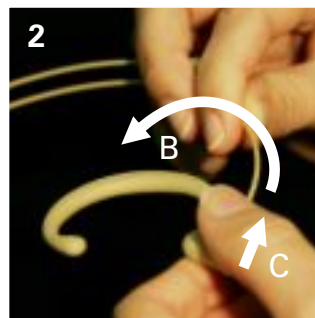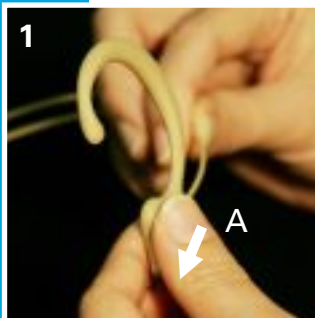



1. Opening the ear-cushion from flat position (or visa-versa)

To make the ear-cushion either flat or in the upright wearing position, simply hold the earpiece and the back section (as seen left) (A.) then **GENTLY** pull out approximately 1mm (until earpiece moves freely) (B.) then turn 90° and (C.) release. The earpiece should click into position, in either the upright or flat position. For a video instruction on this please go to www.da-cappo.com

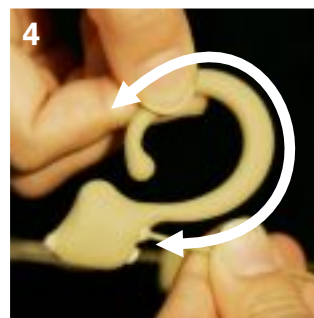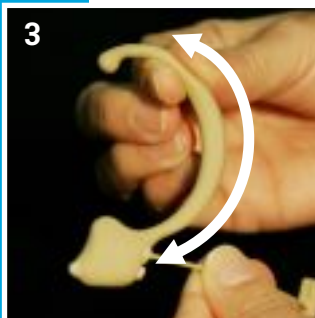



2. Adjusting ear-cushion size

Inside the soft comfort-fit rubber of the ear-cushion is flexible sprung steel which can be adjusted to fit all ear sizes from extra-small to extra-large. You can see in figure 3 and 4 how the ear-cushion is adjusted by simply bending or stretching. **Note:** You may need to bend the ear-cushion further than expected as it will spring back into it's new size.

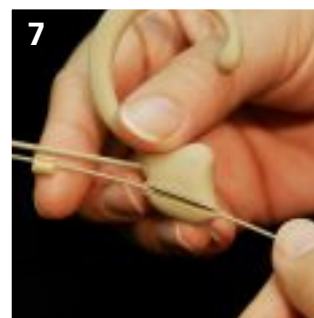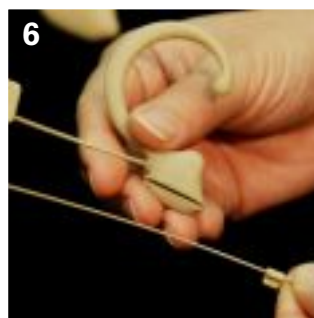

3. Fitting or changing microphone positions

The microphone can be worn on either side of the head to suit personal preference. To swap the microphone position, the boom section should be removed from the securing slot and placed in the slot on the preferred side. (This may require the removal of the plastic insert from the slot). Firmly push the microphone in and then attach it to the rear of the headset with clip supplied (as seen in picture 8). For more details refer to the instructional videos at www.da-cappo.com

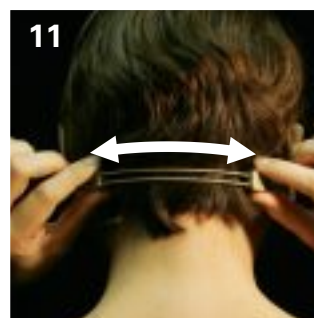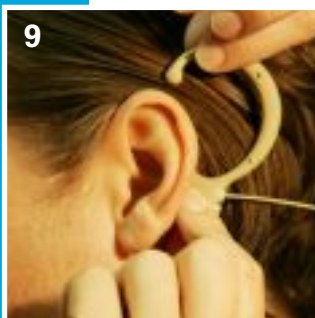

4. Fitting microphone to ears and head

Firstly place ear-cushion over one ear, then repeat for the opposite ear. After the ear-cushions have been fitted on both ears then slide the rear adjustment into position to fit (see picture 11).